

User Manual

bein



4K

4K ultra high definition digital satellite receiver
Personal video recorder

bein.com

CONTENTS

Safety Recommendations	01
Technical Specification	01
1. Before you Start & Connections	02-04
Before you Start	02
Receiver & Accessories in the pack	02
Subscription Activation	02
Connections to the IF Signal	03
Connecting TV with HDMI cable	03
Connecting Home Theater	03
Inserting SIM card	04
2. Description	05-07
Front / Side / Rear / Bottom Panel	
Front	05
Side	05
Rear	06
Bottom	06
HDD	06
Remote Control Unit	07
3. Installation	08-11
First Time Installation	
Step 1 - Initial Screen	08
Step 2 - Resolution selection	08
Step 3 - Bluetooth connection	08
Step 4 - Wi-Fi connection	09
Step 5 - LNB & Transponder Selection Screen	09
(1) Universal Settings	10
(2) DiSEqC Settings	10
(3) SatCR Settings	10
(4) dCSS Settings	10
(5) Entry point	11

Step 6 - Signal lock	11
Step 7 - Scan more FTA channels	11
Step 8 - Scan completed	12

4. Basic Functions 12-16

Basic Functions - FTA Remove Service

(1) Familiarizing with Menu	13
(2) General Banner description	14
(3) Access to additional information on the selected program	14
(4) Electronic Program Guide	15
(5) Audio and Subtitles configuration	15
(6) Parental Control set up	15
(7) Software upgrade	16

5. Major Features 17-19

(1) PVR Features	17
(2) Multi-view	18
(3) Restart TV	19

6. Troubleshoot 19

7. Product notes 20

Warranty certificate 21-22

Safety Recommendations

Please read the entire manual thoroughly and retain it for future reference. The company will not take any responsibility for accidents or damage resulting from careless handling by the user.

WARNING



- Always follow these instructions to avoid the risk of injury to yourself or damage to your beIN Box.
- Unplug the beIN Box from the AC power outlet before cleaning.
- Use only a damp cloth for cleaning the exterior of the beIN Box.
- Do not use accessories or attachments not recommended by the beIN Box manufacturer as they may cause problems to the beIN Box and will void the warranty.
- Do not place the beIN Box on an unstable cart, stand, tripod, bracket, or table.
- The beIN Box may fall, causing personal injury and damage to the beIN Box.
- Do not block or cover the slot opening in the beIN Box. (These are provided for ventilation and protection from overheating.)
- Never place the beIN Box near or over a radiator or any heat source.
- Do not place the beIN Box in an enclosure such as a cabinet without proper ventilation.
- Do not stack the beIN Box on top of or below other electronic devices.
- The beIN Box shall not be exposed to dripping or splashing and with no object filled with liquids, such as vases, shall be placed on the beIN Box.
- Operate the beIN Box using only the type of power Source indicated on the marking label.
- Unplug the beIN Box power cord by gripping the power plug, not the cord.
- Route power supply cord so that it is not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to the cords that plugs in the convenience receptacles, and the point where they exit from the unit.
- Use an outlet that contains surge suppression or ground fault protection.
- Do not keep the beIN Box in the following situations: Doing so might cause problems.
 - where it is too hot or cold.
 - where there is high humidity.
 - where there are excessive temperatures, for example in front of air conditioners or heating vents.
 - where there is dust or soot in confined areas where the heat cannot be released.
 - where it is exposed to direct sunlight.
- For added protection during a lightning storm, or when the beIN Box is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the lines between the beIN Box and the antenna. This will provide some protection against electrical damage caused by lightning or power line surges.

Technical Specification

INPUT VOLTAGE	DC 12V 3A
INPUT VOLTAGE FREQUENCY	50/60 Hz
AC POWER ADAPTOR	AC 100-240V 50/60Hz
TYPE	External Adaptor
POWER CONSUMPTON	Max. 36W

SIZE (W x H x D)mm	STB : 190 x 170 x 28(mm)
	HDD : 190 x 170 x 25(mm)
WEIGHT	STB : 365g
	HDD : 375g
OPERATING TEMPERATURE	0°C - +40°C
STORAGE TEMPERATURE	0°C - +40°C

1. Before you Start & Connections

Before you Start

Please read the safety instructions carefully before installing your Ultra-High Definition digital receiver and keep them for future reference. In this chapter, please follow the proper connection set-up of the Digital 4K - Receiver as explained.

Receiver & Accessories in the pack

The package includes :



Ultra-high definition receiver



Ethernet cable




HDMI cable



beIN SIM Card



Remote control & Batteries



Power adapter



User's manual

Subscription Activation

To enjoy beIN's great TV experience, you need to activate your subscription. Please contact your dealer or call the beIN call center.

For more information or support, please visit (<http://www.bein.com/en/support/>).

Connections to the IF Signal


Connecting devices to your beIN receiver.

Before starting the installation, make sure all devices (TV and satellite receiver) are placed in an easily located, visible and accessible position.

CAUTION!

Before connecting the receiver, disconnect all devices from the power supply.

Connecting TV with HDMI cable

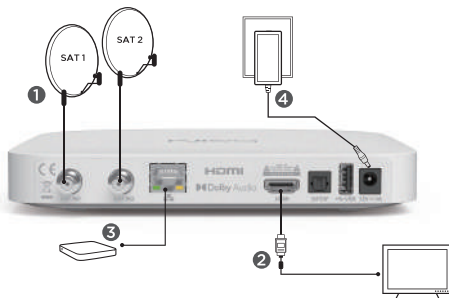

1. Connect the **Antenna cable** connector (already connected to a Satellite dish) to the SAT IN 1 [if one SAT IF Cable] and SAT IN 1 & SAT IN 2 [if two SAT IF Cables] on the back of the UHD-Receiver.
2. Connect the HDMI connector with the **HDMI cable** to the HDMI socket of the Ultra-High Definition digital TV.
3. Connect the **Ethernet cable** from the router gateway to the network socket (RJ45 connector) on the rear of the UHD-receiver.
4. Connect the DC jack of the **Power adaptor** to the back of the UHD-Receiver and then connect the Power Adaptor to the mains wall plug.

Connecting Home Theater

Connect the **DIGITAL AUDIO** with the S/PDIF optical cable (not included) to your home theatre amplifier for digital channels support with Dolby® Digital quality sound.



Inserting SIM card

Your smart card should already be inserted in your receiver. If this is not the case, please follow the below instructions.

- 1 Place your **SIM card** with the chip (golden contact surface) facing downwards (as shown in the diagram).
- 2 Insert the **SIM card** carefully into the card slot of the receiver until the card reaches the end of the slot and is retained in the box. If you need to remove it, carefully pull the **SIM card**.




CAUTION!

- Avoid unnecessary removal and insertion of the SIM card.
- Do not bend the SIM card.
- Keep the SIM card away from children and pets.
- Avoid contact of the SIM card with liquids or cleaning detergents.

2. Description

Front / Side / Rear / Bottom Panel

Front

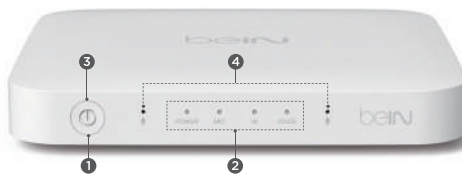

Front Panel

① Tact Switch	1 x Tact Switch (Power button)
② LEDs	4 x LED - Power (Standby : Red / ON : Green) - MIC (MIC SW ON : OFF / MIC SW OFF : Red) - IR (Red) - Alexa Assistant Indicator (Tri-color)
③ IR Receiver	1 x IR Receiver (IR Protocol : RC5)
④ MIC	2 x Digital MIC (FPCB Type)


Side



Side Panel

① Sim Card Slot	1 x Sim card slot (Push-Pull Type)
② Slide Switch	1 x Slide Switch (For MIC ON/OFF) *Left : OFF / Right : ON

Rear

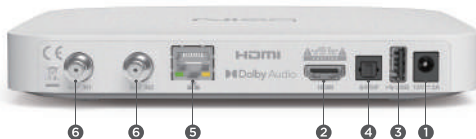

Rear Panel

① DC Jack	1 x DC Jack
② HDMI	1 x HDMI
③ USB	1 x USB 2.0 (Vertical Type)
④ S/PDIF	1 x S/PDIF (Optical)
⑤ RJ-45	1 x RJ-45 (10/100Mbps)
⑥ F-type Connector	2 x F-type Connector (Satellite Input)

Bottom



Bottom Panel

① USB Docking Connector	1 x USB Connector
-------------------------	-------------------

HDD

Only the Premium models are supplied with HDD.



HDD

① HDD	1 x 2.5 inch HDD (Capacity : 1TB)
② USB Docking Connector	1 x USB Connector

Remote Control Unit

	Key Label	Description
1	AV	TV Input / Source Key
2	Power	Power on STB / TV
3	Info	Show Info
4	Home	Launch Home
5	Guide	Launch Guide
6	Up	Navigate Up
7	Left	Navigate Left
8	OK	Select
9	Right	Navigate Right
10	Down	Navigate Down
11	Back	Go Back
12	VOD	Launch VOD
13	Exit	Exit
14	VOL+	Volume increase
15	Record	Recording
16	CH+	Channel Up
17	VOL-	Volume decrease
18	Mute	Mute
19	CH-	Channel Down
20	Rewind	Rewind content
21	PLAY/PAUSE	Play / Pause content
22	Forward	Forward content
23	Hot Key1	beIN
24	Hot Key2	YouTube
25	1	Digit 1
26	2	Digit 2
27	3	Digit 3
28	4	Digit 4
29	5	Digit 5
30	6	Digit 6
31	7	Digit 7
32	8	Digit 8
33	9	Digit 9
34	0	Digit 0



3. Installation


First Time Installation

Step 1 - Initial Screen

First time the boot up will launch this screen.




You can choose any one of the languages from the options: English, Arabic, French or Spanish. Select the language of choice and select the **Continue** button on the screen.

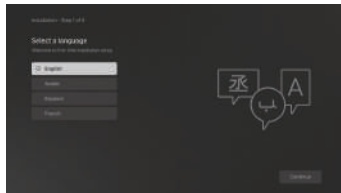

Step 2 - Resolution selection

Set the appropriate resolution matching your TV and press the **Continue** button on the screen.

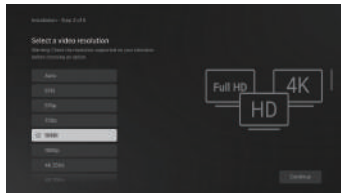

Step 3 - Bluetooth connection

To setup the Bluetooth RCU, select the **Start Pairing** button on the screen. STB will scan for the beIN BT RCU and connect to the RCU. **Do it later** will skip Bluetooth RCU set-up & the RCU will continue to work in IR mode.

Note : if the Connection fails, press **OK + Volume Down** key for 2-3 sec, until you see the RCU indicator blink twice & select the **Retry** button.





Step 4 – Wi-Fi connection

To connect to the internet, the STB will provide an option of either Ethernet or Wi-Fi. Select **Connect** to continue. When the STB is connected to an Ethernet cable, the STB will try to automatically connect to the internet. A successful internet connection will be displayed on-screen.

When Ethernet is not connected, the STB will scan available Wi-Fi access points & list them. Please select the desired Wi-Fi access point and follow the on-screen instructions to complete.

A successful internet connection will be indicated on the screen.

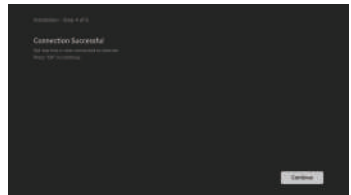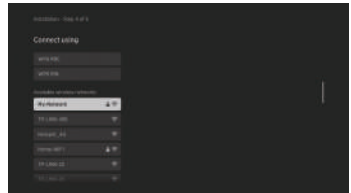


Step 5 – LNB & Transponder Selection Screen

To setup the LNB, ensure the Satellite Dish feed is securely connect to the STB. If only 1 RF feed is connected, it needs to be connected to input **Sat IN 1**. If 2 feeds are available, they need to be connected to both inputs **Sat IN 1 & 2**.

You can choose between 4 configurations for both inputs. Based on the LNB type select the RF 1 & RF 2 input type :


- Universal
- SatCR
- DiSEqC
- dCSS

If you are connecting only one entry, it should be **SAT IN 1**, and the second one should be configured as **Not Connected**. Otherwise, your receiver may not work properly. We recommend you select **SatCR** in order to use the Personal Video Recording functionality of your receiver.

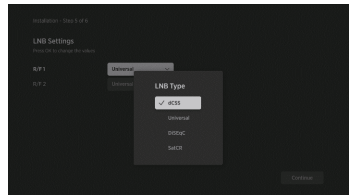


◆ (1) Universal Settings

Edit the Low & High band Frequency & select the Continue button.

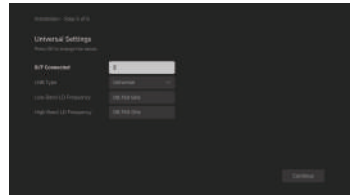


◆ (2) DiSEqC Settings

Update the Low & High band Frequency along with the DiSEqC port configuration based on the connection type & select the Continue button.

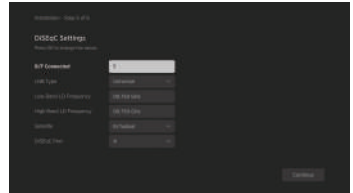


◆ (3) SatCR Settings

Update the Low & High band Frequency along with the number of bands supported on the SatCR & the User band frequency at the individual ports based on the connected SatCR device type & select the **Continue** button.

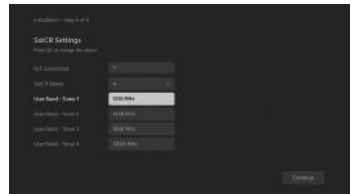


◆ (4) dCSS Settings

Select the dCSS configuration (dCSS 1,2,3) based on the frequency & select the **Continue** button.

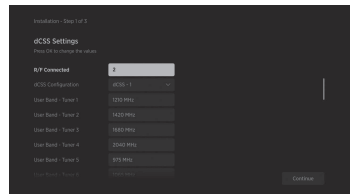

◆ (5) Entry point


Select the Transponder entry point and select the **Continue** button to proceed.

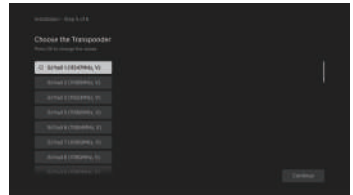

Step 6 – Signal lock


If the satellite signal level is low, please change the position of the satellite dish for better signal level and quality.

With good quality signal and strength, you will achieve signal lock. Select the Finish button to proceed.

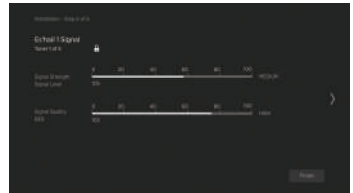


Step 7 – Scan more FTA channels

Once the lock is done, the first beIN channel is launched and an option to add FTA Channels will appear. Select **Continue** to add FTA channels or **Do it Later** to skip adding FTA channels.

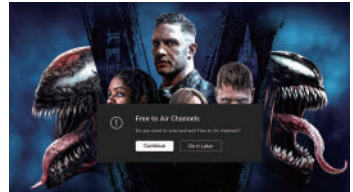

You can select to perform a **Transponder Scan** or **Satellite Scan**.

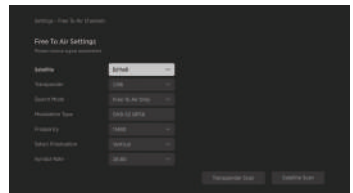


Your receiver will automatically scan all available channels from the satellite. This step can take up to 20 minutes.

STB will scan for all the available FTA services in that transponder or Satellite, based on the selection type.



You can select and save your preferred channels using the option **Add Selected** or alternatively, **Add All** for all channels.

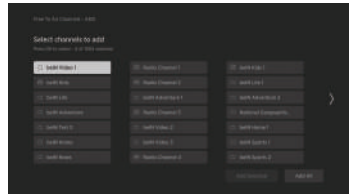

Step8 - Scan completed

After saving channels, press the **back** button to return to the default channel.

4. Basic Functions


Basic Functions - FTA Remove Service

You can remove the FTA service by accessing **Settings > Free To Air Channels > Manage channels**.


Select the channel(s) to be removed.

Select the option **Remove Selected**, to remove your selection.

Alternatively, select **Remove ALL**, to remove all channels.

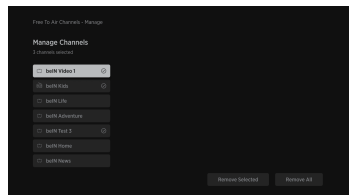

Confirm the removal of the FTA channel(s) by selecting **Remove**, or select **Cancel** to discard the request.

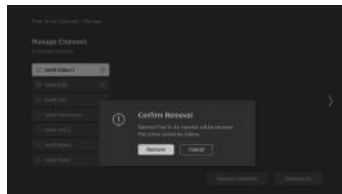

◆ (1) Familiarizing with Menu

By pressing the **Home** button on your remote control, the Home screen will be displayed.

In internet connected mode, a host of VOD contents will be available across various menus.

- Home
- FIFA
- Sports
- On Demand
- YouTube


Guide will launch the Electronic Program Guide.

My Library will launch a screen with all your recorded contents (if any).

YouTube will launch the Google YouTube Application


Messages will list all the beIN messages.

Settings will launch STB settings options.

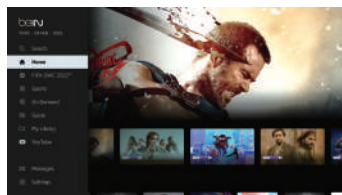

Press the **Back** key to expand menu options.

In disconnected mode, On-Demand, YouTube and some home screen features will not be available. Connect your device to the internet to have the best experience.

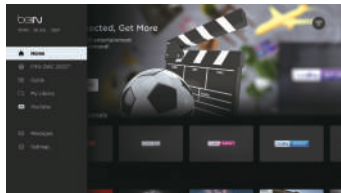

◆ (2) General Banner description

Description :

- A** - Channel number and channel logo if available.
- B** - Current viewed event. Pressing the **Left** and **Right** key will allow you to navigate to the next and previous event (if information is available).
- C** - 24 hours program information available on the current channel. Also, 7 days program information for all channels is available in the GUIDE.



◆ (3) Access to additional information on the selected program


By pressing the **OK** button on your RCU, extended options for the current event will be available.

- Restart (if applicable)
- Manage record
- Multi view
- Audio & subtitle
- Info



By pressing the **Info(i)** button/ info option in the Player Banner or on your remote control, detailed information about the program will be displayed on the screen (if available) :

- **Name**
- **Duration**
- **Summary**

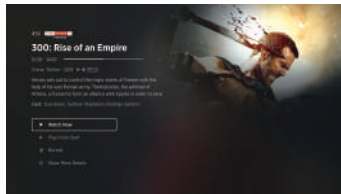


◆ (4) Electronic Program Guide

Press the **Guide** key on the RCU or select **Guide** in the home screen.

Description :

- A** - Current viewed event.
- B** - Current criteria applied for sorting (event type, time, ...).
- C** - Channel list (use **Up** and **Down** keys to move in list).
- D** - Programs grid in the selected time slot (use **Left** and **Right** keys to navigate).

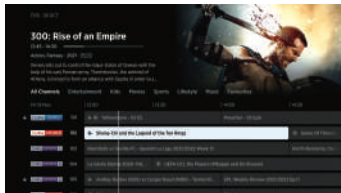

◆ (5) Audio and Subtitles configuration

By selecting **Audio & Subtitles** in the Player Banner, you can change the audio and subtitle configuration :

- Select the **Audio language** in the list (only available languages are accessible).
- Select the **Subtitle** language to be displayed on the screen (only available subtitles languages are accessible, **None** means no possible subtitles).



◆ (6) Parental Control set up

To set up parental control levels, please follow the below steps :


- Press **MENU** button on your remote control.
- Select **Settings** from the menu options.
- Select **Parental Control**.
- Enter your PIN (default PIN is 0000).
- Select your parental control level by using **Up** and **Down** keys.

If the currently watched event is above the parental rating level set, the program will be blocked and the Parental Pin will be requested.




In order to Change the Parental Pin, please follow the below steps :

1. Select **Settings** Menu
2. Select **Change PIN**
3. Enter existing PIN
4. Enter New PIN

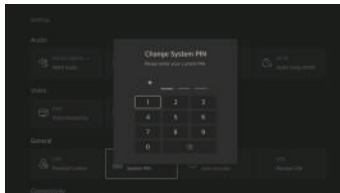


◆ (7) Software upgrade

Your set-top box is able to perform software upgrades using the satellite signal. This is done automatically, when updated software is available and your set-top box is in standby mode. In case your set-top box in standby mode has started to download the update, the following screen will be displayed if you try to interact with the STB.

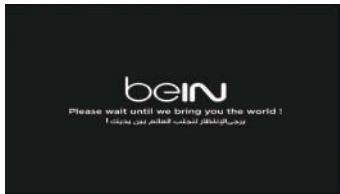

In such a case, do not unplug your receiver and wait for the download and installation of new software to complete. The receiver will automatically restart and display video when finished.

This step can take time (up to 30 minutes).

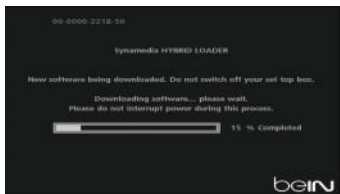

5. Major Features

◆ (1) PVR Features


You can record the events and play, pause or stop the recorded events.

5.1. Recording events


5.1.1. Instant recording

Press the **RECORD** button to record the current event instantly. Press the **RECORD** button again to cancel.

You will be able to use all the Recording options via the Player Banner.

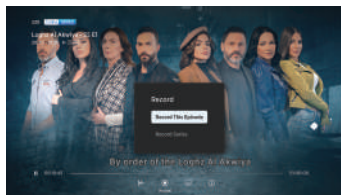

You can view the list of all recordings in **My Library** menu..

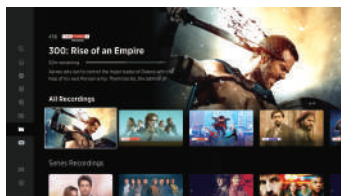

5.2. Playback and Live Pause

The receiver is recording the last 60 minutes of uninterrupted viewing, allowing you to rewind within this time period.

Press the **PLAY** button to playback the recorded events.

Press the **PAUSE** button to pause playback or live.

Press the **STOP** button to stop playback or recording and go back to live or stop recording.

Press the **FAST REWIND** button to watch missed scenes.

Press the **FAST FORWARD** button to fast forward the event.

◆ (2) Multi-view


You can record the events and play, pause or stop the recorded events.

5.3 Multi-view

Multiview is available for selected sports services, which will be indicated by the **Multi-view**  in the Player Banner.




Selecting the **Multi-view**  presents a Swimlane of Multi-view services you can choose from.

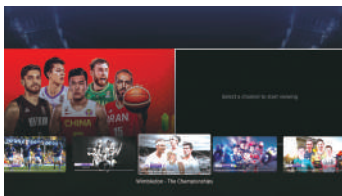

Selection of either Multi-view window can be done using the remote control dial and allow a new Multi-view program to be selected, or change the audio language, or enable subtitles.

Selecting the remote control **Back** or **Exit** key exits Multi-view mode.

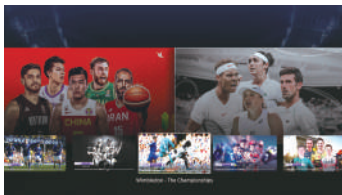

◆ (3) Restart TV

Restart TV is available in selected services, and allows you to play the current broadcasted event from the start. These services are indicated by the **Play from Start** icon.



Amazon Alexa

When this service is available, you will be notified by B Mail.

| Voice | Voice Assistant Indicator [Tri-color]



6. Troubleshoot

Before contacting your local service, please read the following instruction. If the product does not work properly after completing the follow actions, please contact the technical support.

Problem	Check point	Action
No image on TV screen	Is the power adaptor plugged in?	Plug the power adaptor into the power outlet.
	Is the HDMI cable connected to the set-top box properly?	Connect the receiver to the TV properly.
	Did you choose the right source input mode?	Press the TV/Source button on the TV to select a right mode.
No sound	Isn't the sound set to Mute?	Press the Mute button to unmute.
	Does the audio player connected to the audio cable support the audio signal of the set-top box?	Select a right input mode for the audio player or the TV in connection with the audio cable.
	Is the audio cable connected properly?	Connect the audio cable properly.
	Has the audio player in connection with the audio cable turned on?	Turn on the audio player connected to the audio cable.
No proper operation of remote control	Doesn't the battery run out?	Replace the battery.
	Is the battery inserted properly?	Insert the battery so that it fits the polarity.
	Does the remote control face forward the front panel of the set-top box?	Face the remote control forward the front panel of the set-top box.
	Isn't it too far from the set-top box?	Keep the distance in less than 6m.
	Isn't there any obstacle in front of the set-top box?	Remove the obstacles in front of the set-top box.
The set-top box does not turn on	Is the power adaptor plugged in?	Plug the power adaptor into the power outlet.
	Isn't there temporary power cut?	Try to operate an electric lamp or any other electric device to check if there is a power cut.

7. Product notes



The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Vision, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.



Copyright

This document is protected by copyright and may not be copied, photocopied, reproduced, translated or reduced to any electronic or machine-readable form, in whole or in part, without prior consent in writing from beIN MEDIA GROUP.

© 2022-beIN MEDIA GROUP


All rights reserved.

Warranty certificate

Note : Please complete the requested information below and present this card if in need of service/warranty.

**Type: beIN receiver
Kaonmedia (KSTB6150 / KSTB6150 (P))**

STB reference : Place here the label with STB Serial number. STB



Selling date :

**Reseller stamp
(name and
address) :**

For your benefit, we recommend that you record your serial number, found on the product, and other purchase information on this card and keep it safely, along with proof of purchase. This information will allow us to better serve your needs.

• WARRANTY CONDITIONS

Keep this Certificate together with the original invoice or receipt in a safe place and show these to the retailer or place of purchase whenever a warranty repair is necessary.

• CONSUMER WARRANTY

beIN Media Group (beIN) warrants this product to be free of defects in materials and workmanship, subject to the conditions set forth overleaf.

• CONDITIONS

1. The Warranty is valid for a period of 12 months from the buying date. Warranty is valid within one year from the date of purchase if any component(s) is found to be defective due to faulty workmanship of defective material will be repaired free of charge and defective part will be replaced. Parts repaired or replaced are under Warranty throughout the remainder of the original warranty period only.
2. In the event that this product fails to function properly during the warranty period, the retailer or distributor will make best efforts to provide the product in a good operating condition on an urgent basis, without charging for labor and parts.
3. This warranty will be honored only if the Warranty Certificate has been duly completed by the purchaser and is presented to the retailer with the original invoice or receipt.
4. This warranty does not cover shipping or transportation charges from you to us.
5. The obligations of the distributor are limited to the repair of defective parts. Costs and risks of transport to the retailer as well as removal and installation of the product, and All costs arising from customs duties or shipping are the purchaser's responsibility.
6. All warranty repairs performed by non-authorized repair shops will not be reimbursed and if such repairs damage this product such damage will not be covered by this warranty.
7. This warranty is not applicable in cases other than defects in materials or workmanship and, in particular, does not cover :
 - Periodic check-ups, adjustments, maintenance or conversions as well as replacement of parts due to normal wear and tear;
 - Defect caused by chemical reaction, excessive heat, excessive dust, corrosive surroundings, such as cement factory, animal farm, etc.
 - Damage caused by accidents, negligence, modifications, use of non-authorized parts, improper use, installation or package;
 - Damage caused by usage of non-authorized power supply, wrongs power supply voltage, corrosion rusts or stains, incorrect mains voltages.
 - Damage caused by lightning, water, fire, acts of war, public disturbances, incorrect ventilation or any other cause beyond the control of the distributor;
 - Products where the label bearing the serial number has been removed, altered defaced or is illegible ;
 - Damage caused by usage not in accordance with user manual;
 - Product where the label "QC Passed" has been removed, damaged, broken, defaced or is illegible.
8. This warranty is offered to any person who has legally obtained possession of this product within the warranty period.
9. This warranty does not covers cables and batteries.
10. beIN's maximum liability shall not exceed the actual purchase price paid by you for the product. In no event shall beIN be liable for special, incidental, consequential or indirect damages.



beIN

beIN

الشروط والأحكام

1. الضمان صالح لمدة 12 شهرا من تاريخ الشراء.
الضمان ساري المفعول في غضون سنة واحدة من تاريخ الشراء.
إذا تبين أن وجود خلل في أي قطعة سيتم تطليحها مجانا وسيتم استبدال الجزء المتضرر.
تخضع قطع الغيار التي تم إصلاحها أو استبدالها للضمان طوال الفترة المتبقية من الضمان الأصلي فقط.
 2. في حالة لم يعمل المنتج بشكل صحيح خلال فترة الضمان ، سيبدل البائع أو الموزع قفاري جهده لتوفير المنتج في حالة جيدة دون فرض رسوم التطليح وقطع الغيار.
 3. ستتمكن من الحصول على الضمان فقط بوجود إثبات شهادة الضمان المقدمة.
 4. لا يغطي هذا الضمان رسوم الشحن أو النقل منك إلينا.
 5. تقتصر التزامات الموزع على إصلاح الأجزاء المتضررة.
تكاليف ومخاطر النقل إلى بائع التجزئة وكذلك إزالة وتركيب المنتج.
 6. لن يتم تعويض إصلاحات تم قبل إجرائها من قبل ورش التطليح غير المعتمدة، وإذا تعرض المنتج لضرر خلال عملية التطليح فلن يكون مشمولاً في الضمان.
 7. لا يسري هذا الضمان في حالات أخرى غير العيوب في المواد أو التصنيع و على وجه الخصوص ، لا يغطي:
 - الفحوصات الدورية والتعديلات والصيانة والتحويلات وكذلك استبدال الأجزاء المتضررة بسبب سوء الاستهلاك.
 - عيب ناتج عن تفاعل كيميائي ، حرارة زائدة ، غبار مفرط ، تآكل المحيط ، مثل مصنع أسمنت ، مزرعة الحيوانات ، إلخ. الضرر الناجم عن الحوادث ،
 - أو لإهمال ، أو التعديلات ، أو استخدام الأجزاء غير المصرح بها ، أو الاستخدام غير السليم ، أو التركيب ، أو العبوة.
 - الضرر الناتج عن استخدام مصدر طاقة غير مصرح به ، أو خطأ في جهد مصدر الطاقة ، أو صدأ أو بقع بسبب التآكل ، أو جهد كهربائي غير صحيح.
 - الأضرار الناجمة عن الصواعق أو المياه أو الحرائق أو الحروب أو الاضطرابات العامة أو التهوية غير الصحيحة أو أي سبب آخر خارج عن سيطرة الموزع.
 - المنتجات التي تمت إزالة المصق الذي يحمل الرقم التسلسلي فيه أو تم تغييره أو أصبح غير مقروء.
 - الضرر الناجم عن الاستخدام الذي لا يتوافق مع دليل المستخدم.
 - المنتج الذي تمت فيه إزالة ملصق «Passed QC» أو إتلافه أو كسره أو تشويبه أو أنه غير مقروء.
8. يتم تقديم هذا الضمان لأي شخص حصل بشكل قانوني على هذا المنتج خلال فترة الضمان.
9. لا يغطي هذا الضمان الكابلات والبطاريات.
10. يجب ألا يتجاوز الحد الأقصى لمسؤولية مجموعة بي ان سبورتس الإعلامية سعر الشراء الفعلي الذي دفعته مقابل المنتج.
لن تكون مجموعة بي ان سبورتس الإعلامية مسؤولة بأي حال من الأحوال عن الأضرار الخاصة أو العرضية أو التبعية أو غير المباشرة.



bein

شهادة الضمان

ملاحظة: يرجى استكمال المعلومات المطلوبة أدناه وتقديم هذه البطاقة إذا كنت بحاجة إلى خدمة الضمان.

Type: beIN receiver
Kaonmedia (KSTB6150 / KSTB6150 (P))

STB

ضع هنا الملصق مع الرقم التسلسلي STB.

مرجع STB :



تاريخ البيع :

ختم البائع
(الاسم والعنوان) :

نوصي بتسجيل الرقم التسلسلي الخاص بك ، الموجود على المنتج ، وغير ذلك، الاحتفاظ بالمعلومات الموجودة على هذه البطاقة ، بالإضافة إلى إثبات الشراء. سيسمح لنا هذا بتلبية احتياجاتك بشكل أفضل.

شروط الضمان

احفظ بهذه الشهادة مع المانورة الأصلية أو الإيصال في مكان آمن وأظهرها للبائع أو مكان الشراء كلما احتجت تصليح الجهاز خلال فترة الضمان .

تضمن مجموعة بي ان سبورتس الإعلامية خلو هذا المنتج من عيوب المواد والتصنيع ، مع مراعاة الشروط المنصوص عليها أعلاه.

7. حول المنتج



المصطلحات التالية HDMI و Interface Multimedia High-Definition HDMI وشعار HDMI هي علامات تجارية أو علامات تجارية مسجلة لشركة HDMI. Administrator Licensing Inc. في الولايات المتحدة وبلدان أخرى.



تم التصنيع بموجب ترخيص من Dolby Laboratories من Dolby Audio و Dolby Vision و Dolby Vision و Dolby Audio ورمز D المزوج علامات تجارية لشركة Dolby Laboratories Licensing Corporation.



حقوق النشر

هذا المستند محمي بحقوق النشر ولا يسمح بنسخه أو تصويره أو إعادة إنتاجه أو ترجمته أو تلخيصه إلى أي شكل إلكتروني أو مقروء آلياً. كليا أو جزئياً، دون موافقة كتابية مسبقة من مجموعة beIN الإعلامية.

© 2022-beIN MEDIA GROUP

جميع الحقوق محفوظة.

◆ (3) إعادة تشغيل التلفزيون

تتوفر خاصية إعادة تشغيل التلفزيون في خدمات محددة، ويسمح بتشغيل الحدث / الفيديو الذي يتم بثه حاليًا من البداية. يشار إلى هذه الخدمات بواسطة التشغيل من البداية
Play from Start



◆ Alexa

عندما تكون هذه الخدمة متاحة ، سيتم إخطارك عبر البريد الإلكتروني

| صوت | مؤشر المساعد الصوتي (ثلاثي اللون)



6. استكشاف الأخطاء وإصلاحها

قبل الاتصال بمركز الخدمة المحلية، يرجى قراءة التعليمات التالية إذا لم يعمل المنتج بشكل صحيح بعد استكمال الإجراءات التالية، يرجى الاتصال بمركز الدعم

المشاكل	السبب المحتمل	الحلول
لا توجد صورة معروضة على شاشة التلفزيون	هل محول الطاقة موصول بالتيار الكهربائي؟ هل كابل HDMI موصول بالجهاز بإحكام؟ هل اخترت إدخال المصدر الصحيح؟	قم بتوصيل محول الطاقة بمأخذ الطاقة. الاستقبال بالتلفزيون بشكل صحيح. اضغط على زر TV / Source في التلفزيون لتحديد الوضع الصحيح.
لا يوجد صوت	هل تُأكد من حالة كاتم الصوت؟ هل يدعم مشغل الصوت المتصل بكابل الصوت الإشارة الصوتية للجهاز؟ هل كابل الصوت مثبت بشكل صحيح؟ هل تم تشغيل مشغل الصوت المتصل بكابل الصوت؟	اضغط على زر كاتم الصوت لإعادة الصوت حدد وضع الإدخال الصحيح لمشغل الصوت أو التلفزيون المتصل بكابل الصوت. قم بتوصيل كابل الصوت بشكل صحيح. قم بتشغيل مشغل الصوت المتصل بكابل الصوت.
جهاز التحكم عن بعد لا يعمل	هل تحققت من حالة البطارية؟ هل تم إدخال البطارية بشكل صحيح؟ هل يعترض جهاز التحكم عن بعد لوح أمام جهاز الاستقبال؟ هل جهاز التحكم موضوع بمكان بعيد عن الجهاز؟ هل هناك أي عائق أمام الجهاز؟ هل محول الطاقة الكهربائي موصول؟ هل هناك أي انقطاع مؤقت للتيار الكهربائي؟	استبدل البطارية أدخل البطارية بشكل صحيح قم بتوجيه جهاز التحكم عن بعد باتجاه جهاز الاستقبال حافظ على مسافة لا تزيد عن 6 أمتار قم بإزالة العوائق الموجودة أمام جهاز الاستقبال قم بتوصيل محول الطاقة بمأخذ الطاقة. حاول تشغيل مصباح كهربائي أو أي جهاز كهربائي آخر للتحقق من انقطاع التيار الكهربائي.

◆ (2) خاصية المشاهدة المتعددة


يمكنك تسجيل الأحداث وتنشغيل الأحداث المسجلة أو إيقافها مؤقتاً أو إيقافها نهائياً.

5.3. خاصية العرض المتعدد

خاصية العرض المتعدد متاحة لخدمات رياضية محددة، والتي سيتم الإشارة إليها من خلال المشاهدة المتعددة في لوحة التحكم Banner Player




يمثل تحديد خاصية المشاهدة المتعددة مسارا لخدمات العروض المتعددة التي يمكنك الاختيار من بينها.

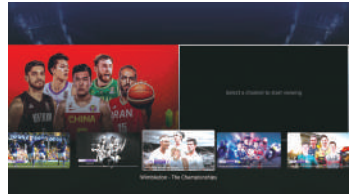

يمكن تحديد نافذة Multi-view باستخدام جهاز التحكم عن بعد والسماح بتحديد برنامج Multi-view جديد أو تغيير لغة الصوت أو تمكين الترجمة.

يؤدي تحديد مفتاح "رجوع" أو "خروج" إلى الخروج من وضع العرض المتعدد.

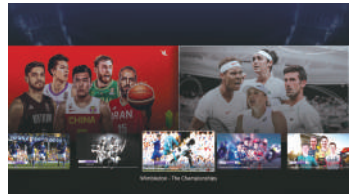


5. الخصائص الرئيسية

◆ (1) خصائص PVR


يمكنك تسجيل وتشغيل الفيديو المسجل أو إيقافه مؤقتاً أو نهائياً.

5.1. تسجيل الفيديوهات أو الأحداث 5.1.1. تسجيل فوري

اضغط على زر RECORD لتسجيل الحدث الحالي بشكل فوري. اضغط على زر التسجيل مرة أخرى للإلغاء.
ستتمكن من استخدام جميع خيارات التسجيل عبر لوحة التحكم Player Banner

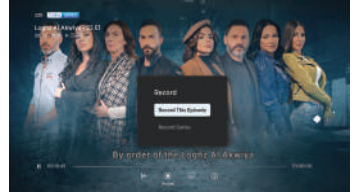

يمكنك عرض قائمة جميع التسجيلات في قائمة My Library.

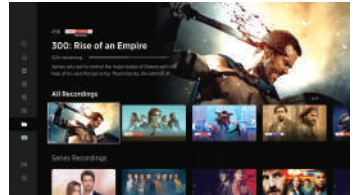

5.2. التشغيل والتوقف خلال العرض المباشر

يقوم جهاز الاستقبال بتسجيل آخر 60 دقيقة من المشاهدة دون انقطاع، مما يتيح لك إمكانية العودة للخلف خلال هذه الفترة الزمنية.

اضغط على زر PLAY لتشغيل الأحداث / الفيديوهات المسجلة.
اضغط على الزر PAUSE لإيقاف التشغيل مؤقتاً أو البث المباشر.
اضغط على زر STOP لإيقاف التشغيل أو التسجيل والعودة إلى البث المباشر أو إيقاف التسجيل.
اضغط على زر REWIND FAST لمشاهدة المحتوى الفائت.
اضغط على زر FORWARD FAST للتقديم السريع للفيديو.

لتغيير رقم التعريف الشخصي PIN، يرجى اتباع الخطوات التالية:

1. اختر قائمة الإعدادات
2. اختر تغيير رقم التعريف الشخصي PIN
3. أدخل رقم التعريف الشخصي المستخدم مسبقا
4. أدخل رقم التعريف الشخصي الجديد




◆ (7) تحديث البرنامج

الجهاز الخاص بك قادر على إجراء تحديث البرامج باستخدام إشارة القمر الصناعي. عندما يكون البرنامج المحدث متاحا ويكون الجهاز في وضع الاستعداد. في حالة بدء الجهاز في وضع الاستعداد لتنزيل التحديث، ستظهر رسالة كما هو مبين



في هذه الحالة، لا يتم فصل جهاز الاستقبال وانتظر حتى يكتمل تنزيل البرنامج الجديد وتثبيتته. سيقوم جهاز الاستقبال بإعادة التشغيل تلقائيا وعرض الفيديو عند الانتهاء. عند الانتهاء، قد تستغرق الخطوة مدة (تصل إلى 30 دقيقة.)

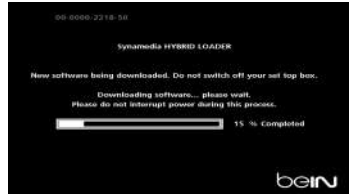

◆ (4) دليل البرامج الإلكتروني

اضغط على مفتاح الدليل في وحدة التحكم عن بُعد أو حدد الدليل في الشاشة الرئيسية.


الوصف :

أ - الحدث المعروض حالياً * الفيذا

ب - المعايير الحالية المطبقة (نوع الحدث، الوقت)...

ج - قائمة القنوات (استخدم مفاتيح الانتقال للأعلى وللأسفل للتنقل في القائمة

د - شبكة البرامج في الفترة الزمنية المحددة (استخدم مفاتيح الانتقال لليسار ولليمين للتنقل في القائمة)

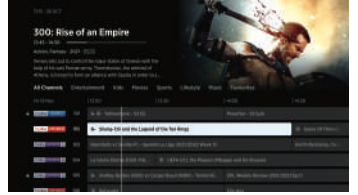

◆ (5) إعدادات الصوت والترجمة

من خلال تحديد الصوت والترجمة في لوحة التحكم Banner Player، يمكنك تغيير إعدادات الصوت والترجمة:

- حدد لغة الصوت في القائمة (يمكن الوصول إلى اللغات المتاحة فقط).
- حدد لغة الترجمة المراد عرضها على الشاشة (يمكن الوصول إلى لغات الترجمة المتاحة فقط. عبارة "لا شيء" تعني لا إمكانية لعرض ترجمات مصاحبة).



◆ (6) إعداد الرقابة العائلية


لإعداد مستويات الرقابة العائلية، يرجى اتباع الخطوات التالية:

- اضغط على زر MENU في جهاز التحكم عن بعد.
- اختر الإعدادات من خيارات القائمة.
- اختر الرقابة العائلية
- أدخل رقم التعريف الشخصي (PIN المؤقت هو 0000)
- حدد مستوى الرقابة العائلية الخاص بك باستخدام مفاتيح الانتقال للأعلى وللأسفل.

إذا كان الحدث الذي يتم مشاهدته حالياً أعلى من مستوى التصنيف العائلي المحدد، فسيتم حظر البرنامج وسيطلب إدخال رمز التعريف الشخصي PIN.



في وضعية عدم الاتصال بالإنترنت، لن تتوفر لديك خاصية الفيديو عند الطلب و YouTube وبعض مميزات الشاشة الرئيسية.
قم بتوصيل جهازك بالإنترنت للحصول على أفضل تجربة.

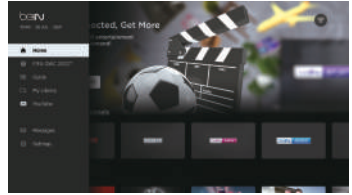

◆ (2) وصف لوحة التحكم

الوصف :

- أ - رقم القناة وشعار القناة إن وجد.
- ب - الحدّ/ الفيديو المعروض حالياً، الضغط على المفتاح الأيسر والأيمن يسمح لك بالانتقال إلى الحدّ التالي والسابق (إذا كانت المعلومات متوفرة.)
- ج - معلومات عن البرامج خلال الـ 24 ساعة المتوفرة على القناة الحالية، كما تتوفر معلومات لمدة 7 أيام لجميع القنوات في الدليل.



◆ (3) الوصول إلى معلومات إضافية حول البرنامج المحدد

بالضغط على زر "مواقع" في وحدة التحكم عن بعد، ستتوفر خيارات موسعة للحدّ/ الفيديو الحالي.

- إعادة التشغيل (إن أمكن)
- إدارة التسجيل
- خاصية المشاهدة المتعددة
- الصوت والترجمة
- المعلومات




بالضغط على زر المعلومات (i) / في لوحة التحكم Player Banner أو على جهاز التحكم عن بعد، سيتم عرض معلومات مفصلة عن البرنامج على الشاشة (إن وجدت).

- الإسم
- المدة
- الملخص



قم بتأكيد إزالة القناة أو القنوات المجانية FTA باختيار "إزالة" أو اختيار "إلغاء" لتجاهل الطلب.

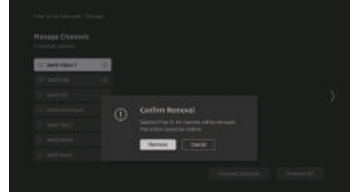


◆ (1) التعرف على القائمة

بالضغط على زر الصفحة الرئيسية بجهاز التحكم عن بُعد، سيتم عرض الشاشة الرئيسية.

في وضع الاتصال بالإنترنت، ستتوفر مجموعة كبيرة من محتويات فيديو حسب الطلب VOD عبر قوائم مختلفة.

- الشاشة الرئيسية
- الفيذا
- الرياضات
- تحت الطلب
- موقع يوتيوب

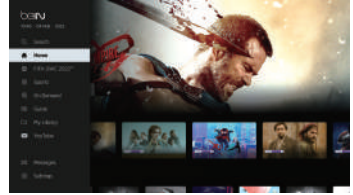

زر الدليل، سيفتح دليل البرامج الإلكتروني.
زر My Library سيفتح شاشة تحتوي على جميع محتوياتك المعاد ترميزها (إن وجدت).

زر Google YouTube سيفتح تطبيق YouTube
زر الرسائل سيدرج جميع رسائل beIN
زر الإعدادات سيفتح خيارات إعدادات STB


اضغط على مفتاح الرجوع لتوسيع خيارات القائمة.

سيقوم جهاز الاستقبال الخاص بك تلقائياً بمسح جميع القنوات المتاحة من القمر الصناعي، قد تستغرق الخطوة مدة تصل إلى 20 دقيقة.

سيقوم الجهاز بالبحث عن جميع القنوات المجانية FTA المتاحة في هذا المرسل المستجيب أو القمر الصناعي، بناء على نوع الاختيار.



يمكنك تحديد قنوات المفضلة وحفظها باستخدام خيار Add Selected أو All لجميع القنوات.

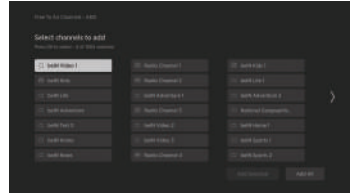


الخطوة 8 - اكتمال المسح

بعد حفظ القنوات، اضغط على زر الرجوع للعودة إلى القناة الأساسية.

4. الخصائص الأساسية


الخصائص الأساسية – القنوات المجانية FTA

يمكنك إزالة خدمة FTA من خلال الوصول إلى الإعدادات> القنوات المجانية> إدارة القنوات. لجميع القنوات.
حدد القناة (القنوات) التي تريد إزالتها. حدد الخيار Remove Selected لإزالة التحديد.
أو يمكنك اختيار ALL Remove , لإزالة كل القنوات.

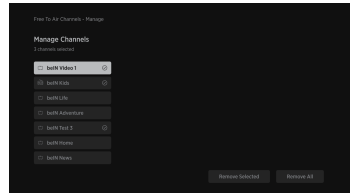


◆ (5) نقطة الدخول

حدد نقطة دخول جهاز الإرسال والاستقبال واختر زر "متابعة".

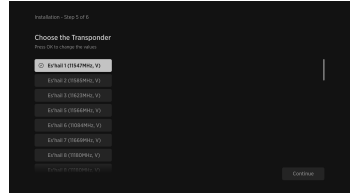


الخطوة 6 - قفل الإشارة

إذا كان مستوى مؤشر القمر الصناعي منخفضًا، يرجى تغيير موضع طبق القمر الصناعي لتحسين مستوى الإشارة وجودتها.

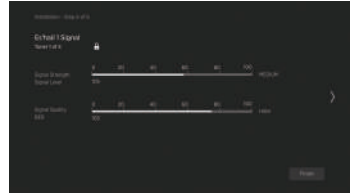


الخطوة 7 - البحث عن القنوات المجانية FTA

بمجرد الانتهاء من القفل، يتم إطلاق أول قناة beIN وسيظهر أمامك خيار إضافة القنوات المجانية FTA، اختر متابعة لإضافة القنوات المجانية FTA أو قم بذلك لاحقًا لتخطي إضافة القنوات المفتوحة.

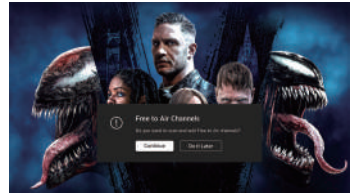

يمكنك تحديد إجراء مسح مستجيب أو مسح قمر صناعي.

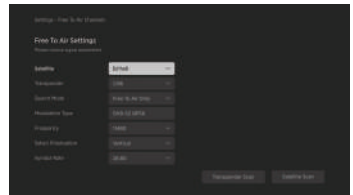

◆ (1) الإعدادات العامة

قم باختيار التردد المنخفض والعالي واختر زر "متابعة".



◆ (2) إعدادات DiSEqC

قم بتحديث التردد المنخفض والعالي مع تكوين منفذ DiSEqC بناءً على نوع الاتصال واختر زر "متابعة".




◆ (3) إعدادات SatCR

قم بتحديث التردد المنخفض والعالي إلى جانب عدد النطاقات المدعومة على SatCR وتردد نطاق المستخدم في المنافذ الفردية بناءً على نوع جهاز SatCR المتصل واختر زر "متابعة".



◆ (4) إعدادات dCSS

اختر إعداد (dCSS 1.2.3) بناءً على التردد واختر زر "متابعة".

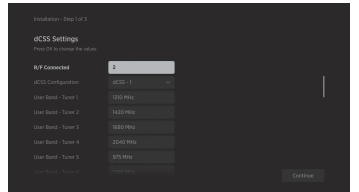

الخطوة 4 – الاتصال بشبكات Wi-Fi

للإتصال بالإنترنت، يوفر جهاز STB خيار Ethernet أو خيار Wi-Fi. اختر زر الإتصال للمتابعة.

عندما يتم توصيل جهاز STB بكابيل Ethernet، سيحاول STB الإتصال تلقائياً بالإنترنت. سيتم عرض اتصال الإنترنت بنجاح على الشاشة.

في حال عدم توصيل Ethernet ستقوم STB بمسح نقاط وصول Wi-Fi المتاحة وإدراجها. يرجى تحديد نقطة Wi-Fi المطلوبة واتباع التعليمات التي تظهر على الشاشة لإكمال عملية الإتصال.



سيتم عرض اتصال الإنترنت بنجاح على الشاشة.


الخطوة 5 - شاشة تحديد جهاز الإرسال والاستقبال LNB

ضبط إعدادات LNB، تأكد من توصيل طبق القمر الصناعي بشكل آمن بجهاز STB إذا تم توصيل تغذية RF واحدة فقط فيجب توصيلها بمدخل Sat IN 1 إذا توفرت إننتان يجب توصيلها بمدخلي 2 & Sat IN 1

يمكنك اختيار 4 إعدادات بمدخلين حسب نوع ال LNB اختر نوع المنفذ RF1 أو RF2

- Universal
- SatCR
- DiSEqC
- dCSS

إذا كنت تقوم بتوصيل إدخال واحد فقط، يجب أن يكون IN SAT 1. ويجب إعداد الإدخال الثاني على أنه غير متصل. خلاف ذلك، قد لا يعمل جهاز الاستقبال الخاص بك بشكل صحيح. توصيك بتحديد SatCR الاستخدام ووظيفة تسجيل الفيديو الشخصي بجهاز الاستقبال.

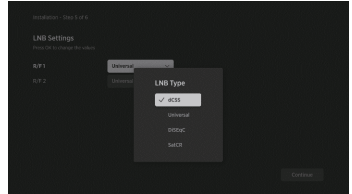

3. التثبيت التثبيت للمرة الأولى

الخطوة 1 - الشاشة الرئيسية

في المرة الأولى ستظهر أمامك هذه الشاشة.



يمكنك اختيار أي لغة من الخيارات المتاحة: الإنجليزية أو الفرنسية أو الإسبانية أو العربية. حدد اللغة التي ترغب بها واختر زر "متابعة" على الشاشة.



الخطوة 2 - اختيار الدقة

اختر الدقة المناسبة لمطابقة لجهاز التلفزيون الخاص بك واضغط على زر "متابعة" على الشاشة.



الخطوة 3 - توصيل بلوتوث

لإعدادات RCU Bluetooth، اختر زر بدء الاقتران على الشاشة. سيقوم STB بالبحث عن RCU BT والاتصال بوحدة التحكم عن بعد. القيام بذلك سيتخطى إعداد RCU Bluetooth وستستمر وحدة التحكم عن بعد في العمل في وضع IR ملاحظة: إذا فشل الاتصال، اضغط على OK + مفتاح خفض مستوى الصوت لمدة 2-3 ثواني، حتى يظهر مؤشر RCU بومض مرتين واختر زر إعادة المحاولة.



شرح المفاتيح	مفتاح التسمية	
مفتاح المصدر AV	AV	1
نقل الجهاز من وإلى وضع التشغيل أو وضع الاستعداد	Power	2
إظهار المعلومات	Info	3
الصفحة الرئيسية	Home	4
بدء التشغيل	Guide	5
الانتقال للأعلى	Up	6
الانتقال إلى اليسار	Left	7
تأكيد الخيار	OK	8
الانتقال لليمين	Right	9
الانتقال للأسفل	Down	10
العودة	Back	11
الفيديو عند الطلب	VOD	12
خروج	Exit	13
رفع مستوى الصوت	VOL+	14
التسجيل	Record	15
الانتقال إلى القناة التالية	CH+	16
خفض مستوى الصوت	VOL	17
وضع الجهاز على الصامت	Mute	18
العودة إلى القناة السابقة	CH-	19
إعادة المحتوى	Rewind	20
إيقاف أو استمرار عرض المحتوى	PLAY/PAUSE	21
تقديم المحتوى	Forward	22
زر مباشر beIN 1	Hot Key1	23
زر مباشر 2 يونيبوب	Hot Key2	24
رقم 1	1	25
رقم 2	2	26
رقم 3	3	27
رقم 4	4	28
رقم 5	5	29
رقم 6	6	30
رقم 7	7	31
رقم 8	8	32
رقم 9	9	33
رقم 0	0	34





الواجهة الخلفية

مفيس تيار	1	مفيس تيار مستمر 1 x
HDMI	2	موصل كابل عالي الدقة
USB 2.0	3	منفذ توصيل USB 2.0
S/PDIF	4	مخرج بصري S/PDIF للصوتيات
RJ-45	5	RJ-45
موصل من النوع F	6	موصل من النوع F (مدخل القمر الصناعي)

الأسفل




الواجهة السفلية

منفذ توصيل USB	1	منفذ توصيل USB
----------------	---	----------------

قرص صلب HDD

يتم تزويد طراز Premium فقط بقرص صلب HDD.

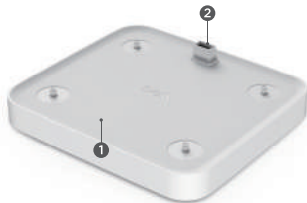


قرص صلب HDD

قرص صلب HDD 1 x 2.5 إنش (سعة: 1 تيرابايت)	1	قرص صلب HDD
منفذ توصيل USB	2	منفذ توصيل USB

2. الشكل الخارجي للجهاز

الواجهة الأمامية / الجانبية / الخلفية / السفلية

الأمام

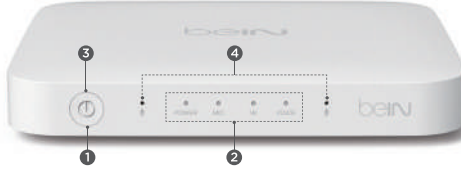

الواجهة الأمامية	
1	مفتاح المس
2	مفتاح الطاقة (زر الطاقة)
3	مفتاح اللياقة (زر الطاقة)
4	المصباح x 4 ليد
5	مؤشر الطاقة (وضعية الاستعداد: أحمر / تشغيل: أخضر)
	- مؤشر لميكروفون
	- مؤشر الموجات الضوئية تحت الحمراء (أحمر)
	- مؤشر Alexa (ثلاثي الألوان)
5	مستقبل الأشعة تحت الحمراء x 1 مستقبِل الأشعة تحت الحمراء (بروتوكول الأشعة تحت الحمراء) RC5
4	ميكروفون، 2 رقمي (نوع) FPCB

الجانب



الواجهة الجانبية	
1	فتحة بطاقة Sim 1 من نوع (Push+Pull)
2	مفتاح محول، خاص بالميكروفون، OFF / ON
	تدبير، الشريحة

إدخال بطاقة

يجب إدخال بطاقتك الذكية في جهاز الاستقبال الخاص بك. إن لم يكن الخيار متاحا، يرجى اتباع الإرشادات أدناه

- 1- ضع بطاقة SIM الخاصة بك مع توجيه الشريحة (سطح التلامس الذهبي) للأسفل (كما هو موضح في الرسم).
- 2- أدخل بطاقة بعناية في فتحة البطاقة بجهاز الاستقبال حتى تبلغ البطاقة نهاية الفتحة وتثبت في الصندوق. إذا أردت إخراجها، اسحب بطاقة SIM بعناية.



تحذيرا!

- تجنب إزالة وإدخال بطاقة SIM إن لم تكن هناك ضرورة.
- لا تنني بطاقة SIM
- احتفظ بطاقة SIM بعيدا عن متناول الأطفال والحيوانات الأليفة.
- تجنب ملامسة بطاقة SIM للسوائل أو المنظفات.


توصيل إشارة التردد المتوسط IF

توصيل الأجهزة بجهاز استقبال beIN الخاص بك.
قبل بدء التثبيت، تأكد من وضع جميع الأجهزة (التلفزيون وجهاز استقبال الأقمار الصناعية) في مكان يسهل رؤيته ويمكن الوصول إليه.

تحذيرا

قبل توصيل جهاز الاستقبال، افصل جميع الأجهزة عن مصدر التيار الكهربائي.

توصيل التلفزيون بكابل HDMI

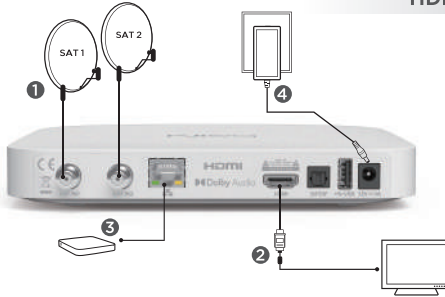

1- قم بتوصيل موصل كابل الهوائي (المتصل بطبق القمر الصناعي) بـ SAT IN 1 (إذا كان كابل SAT IF) و SAT IN 2 & SAT IN 1 (إذا كان هناك كبلين SAT IF) في الواجهة الخلفية من جهاز استقبال UHD.

2- قم بتوصيل موصل HDMI بكابل HDMI بمقبس HDMI الخاص بالتلفزيون عالي الدقة (UHD).

3- قم بتوصيل كابل Ethernet من جهاز الراوتر بمقبس الشبكة (موصل RJ45) في الواجهة الخلفية من جهاز استقبال UHD.

4- قم بتوصيل مقبس التيار المباشر لمحول الطاقة بالواجهة الخلفية من جهاز استقبال UHD ثم قم بتوصيل محول الطاقة بمقابس التيار الكهربائي بالحائط.

توصيل المسرح المنزلي

قم بتوصيل DIGITAL AUDIO بكابل S / PDIF (غير مرفق) بمكبر المسرح المنزلي لدعم القنوات الرقمية بجودة صوت Dolby® Digital.



1. قبل البدء والاتصال

قبل البدء

يرجى قراءة تعليمات السلامة بعناية قبل تثبيت جهاز الاستقبال الرقمي عالي الدقة والاحتفاظ بها للرجوع إليها في المستقبل. في هذا الفصل، يرجى اتباع إعدادات الاتصال المناسبة لجهاز الاستقبال الرقمي 4K كما هو موضح.

جهاز الاستقبال وملحقاته

تتضمن الحزمة:



جهاز استقبال فائق الدقة



سلك الانترنت




كابل HDMI



بطاقة SIM beIN



جهاز تحكم عن بعد وبطاريات



محول طاقة



دليل المستخدم

تفعيل الاشتراك

للاستمتاع بتجربة beIN التلفزيونية الرائعة، عليك تفعيل اشتراكك. يرجى الاتصال بالموزع أو بمركز اتصال beIN لمزيد من المعلومات أو الدعم، يرجى زيارة الموقع: (<http://www.bein.com/en/support>)

إرشادات السلامة

يرجى قراءة الدليل بالكامل والاحتفاظ به للرجوع إليه في المستقبل.
لا تتحمل الشركة أي مسؤولية عن الحوادث أو الأضرار الناتجة عن إهمال المستخدم في التعامل معه.

تحذير



- اتبع دائما هذه التعليمات لتجنب خطر الإصابة أو إلحاق الضرر بجهاز bein Box الخاص بك.
- أفضل جهاز bein Box عن مصدر التيار الكهربائي قبل تنظيفه.
- لا تستخدم سوى قطعة فماش مبللة لتنظيف الجزء الخارجي من bein Box.
- لا تستخدم ملحقات أو مرفقات غير موصى بها من قبل bein Box ، لأنها قد تسبب مشاكل للجهاز ولا تغطي الضمان
- لا تضع bein Box على عربة أو حامل أو حامل ثلاثي القوائم أو طاولة غير ثابتة.
- قد يسقط bein Box أرضا، مما يتسبب في إصابة ما وإلحاق الضرر بجهاز bein Box.
- لا تقم بسد أو تغطية الفتحة الموجودة في جهاز bein Box (مفتحات التهوية هدفها الحماية من الحرارة الزائدة).
- لا تضع جهاز bein Box بالقرب أو فوق الرادياتير أو أي مصدر حرارة.
- لا تضع bein Box في حاوية مثل خزانة بدون تهوية كافية.
- لا تضع جهاز bein فوق أو تحت الأجهزة الإلكترونية الأخرى.
- يجب عدم تعريض bein Box إلى قطرات أو نثرات، وعدم وضعه على أي قطعة تحتوي على سوائل، مثل المرشحات.
- قم بتشغيل bein Box باستخدام نوع مصدر الطاقة الكهربائي المناسب.

- أفضل سلك طاقة bein Box عن طريق الإمساك بقابس الطاقة وليس السلك.
- قم بتوجيه سلك إمداد الطاقة بحيث لا يكون معرضا للسحب عليه أو الضغط عناصر موضوعة عليه أو مقابله له. احذر بشكل خاص الأسلاك التي يتم توصيلها في الأماكن الملائمة، والنقطة التي تخرج منها من الوحدة.
- استخدم منفذاً يحتوي على مانع اندفاع التيار أو حماية من عطل أرضي.
- لا تحفظ بجهاز bein Box في الحالات التالية: قد يؤدي ذلك إلى حدوث بعض المشاكل.
- عندما يكون الجو حارا جدا أو باردا جدا.
- عندما توجد رطوبة عالية.
- عندما توجد درجات حرارة مرتفعة، أمام مكيفات الهواء أو فتحات التدفئة على سبيل المثال.
- عندما يوجد غبار في مناطق مغلقة عندما لا يمكن إخراج الحرارة منها.
- عندما يتعرض للشعاع الشمس المباشرة.
- لمزيد من الحماية أثناء العواصف الرعدية، أو عند ترك جهاز bein Box دون مراقبة ومن دون استخدام لفرترات زمنية طويلة، يجب فصله من مفبس الحائط وكابل توصيل الطاقة بين جهاز bein Box والهوائي. سوفم ذلك يفض الحماية ضد التلف الكهربائي الناتج عن الصواعق أو زيادة التيار الكهربائي.

الخصائص التقنية

DC 12V 3A	مدخل الجهد الكهربائي
50/60 هرتز	مدخل التردد الكهربائي
100 ~ 240 فولت 50/60 هرتز	مدخل طاقة تيار متردد
خارجي	مدخل
36 واط	استهلاك الطاقة الكهربائية

:STB	الارتفاع (عرض x ارتفاع x عمق)
(مم) 170 x 170 x 28190	
:HDD	
(مم) 25 x 170 x 190	
غرام STB: 365	الوزن
غرام HDD: 375	
0 درجة مئوية - +40 درجة	نطاق درجة حرارة التشغيل
0 درجة مئوية - +40	نطاق درجة حرارة التخزين

11	الخطوة 6 – مؤشر قفل الإشارة
11	الخطوة 7 - البحث عن المزيد من القنوات المجانية
12	الخطوة 8 - اكتمال البحث
12-16	4. الوظائف الأساسية
	الوظائف الأساسية - خدمة حذف القنوات المجانية FTA
13	(1) شرح مفصل للقائمة
14	(2) شرح لوحة التحكم
14	(3) الوصول إلى معلومات إضافية في برنامج محدد
15	(4) دليل البرامج الإلكتروني
15	(5) إعدادات الصوت والترجمة
15	(6) إعداد أدوات الرقابة العائلية
16	(7) تحديث البرنامج
17-19	5. الخصائص الرئيسية
17	(1) خصائص جهاز PVR
18	(2) خاصية العرض المتعدد
19	(3) إعادة تشغيل التلفزيون
19	6. استكشاف الأخطاء وإصلاحها
20	7. حول المنتج
21-22	شهادة الضمان

المحتويات

01	إرشادات السلامة
01	الخصائص التقنية
02-04	1. قبل البدء والاتصال
02	قبل البدء
02	حزمة جهاز الاستقبال وملحقاته.
02	تفعيل الاشتراك
03	توصيل بإشارة التردد المتوسط IF
03	توصيل التلفزيون بكابل HDMI
03	توصيل المسرح المنزلي
04	إدخال بطاقة SIM
05-07	2. الشكل الخارجي للجهاز الواجهة الأمامية / الجانبية / الخلفية / السفلية
05	الواجهة الأمامية
05	الواجهة الجانبية
06	الواجهة الخلفية
06	الواجهة السفلية
06	القرص الصلب HDD
07	جهاز التحكم عن بعد
08-11	3. التثبيت
	التثبيت للمرة الأولى
08	الخطوة 1 - الشاشة الافتتاحية
08	الخطوة 2 - اختيار دقة العرض
08	الخطوة 3 - توصيل بلوتوث
09	الخطوة 4 - توصيل Wi-Fi
09	الخطوة 5 - شاشة تحديد جهاز الإرسال والاستقبال LNB
10	(1) الإعدادات العامة
10	(2) ضبط إعدادات DiSEqC
10	(3) ضبط إعدادات SatCR
10	(4) ضبط إعدادات dCSS
11	(5) نقطة الاتصال

دليل المستخدم

beIN



4K

جهاز استقبال ستالايت رقمي فائق الوضوح بدقة 4K
تسجيل فيديو شخصي

bein.com